

KIT # VER - 05
 for SINGLE SLIDE
 landing door 1 1/4" THICK
 with GAL or HORN hangers
 formed or cast







Item	Part No.	Description	Q'ty req'd
1	VER - T	Top Retainer Assembly	2
2	VER - B - M	Bottom Retainer **	1 or 2 **
3	TEKS - 2	Screw 10 - 24 x 3/4 TEKS - 2 or equiv. hexagon washer hd, self tap, self drill	21 or 26 **

Tools Req'd : Electric screwdriver with clutch driven 5/16 hex. socket.
 Clutch set at 30 - 40 inch- pounds torque.
 5/16 & 1/2 wrench for adjustment.

INSTALLATION :

With door closed position top retainers (Item 1) according to dimensions on the drawing.
 Install retainers using supplied hardware, check that retainers will not scrape the door hanger
 when the door is opening or closing.

With door closed position bottom retainer (Item 2) as shown on the drawing.
 Install retainer using one screw in the slotted hole, check that retainer will not scrape the sill
 when door is opening or closing.
 Readjust when necessary, install remaining screws.

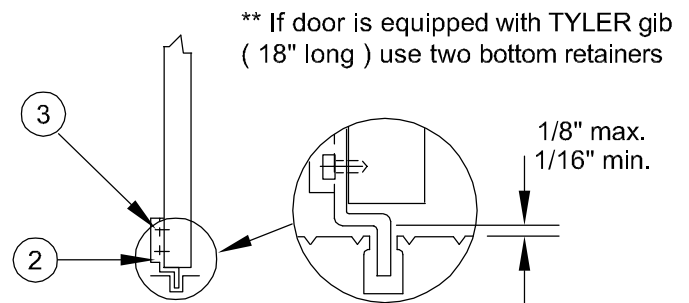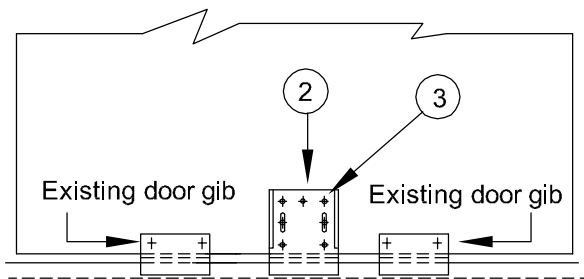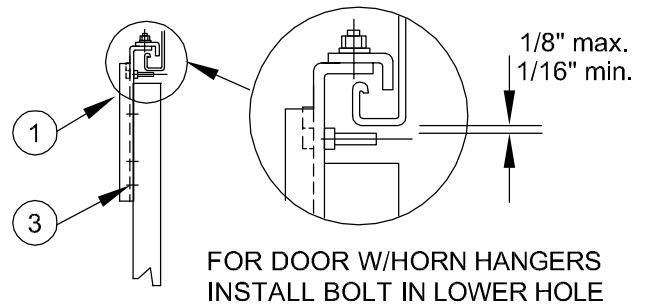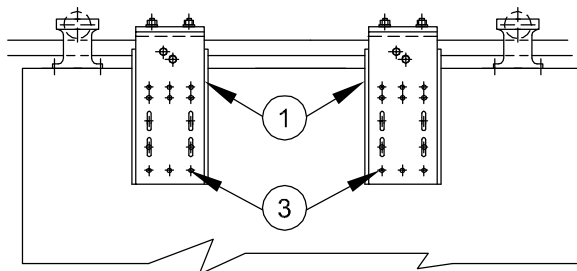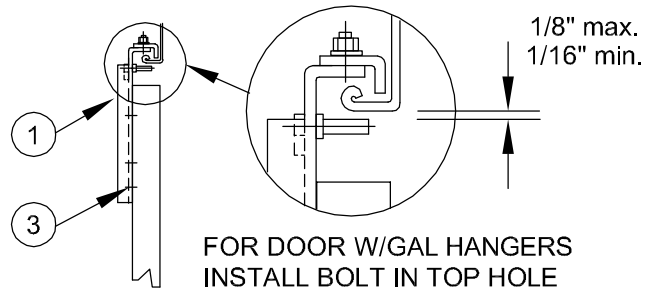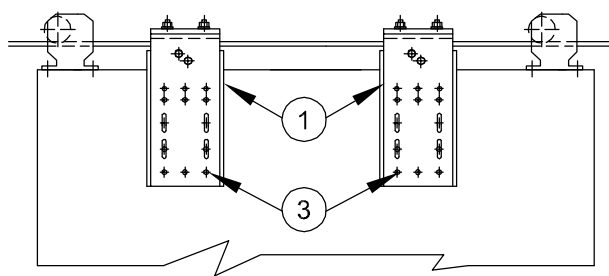

For Single Slide landing door made by	Equipped with HANGERS make & type	BOTTOM GIBS make & type	SAFETY RETAINERS can be obtained from	by ordering kit #	The kit will contain - coloured yellow HEADER RETAINER marked	Q	coloured yellow SILL RETAINERS marked	Q
Tyler, Dahlstrom or Cor - o - foam 1 1/4" THICK door	Horn or G A L Individual	Any type Any make	VERTEX	VER - 05	2	VER - T	1 or 2	VER - B - M **